



# PRODUCT MANUAL

## Caution

ATMOS NATION, LLC., STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS® CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF FOUR (4) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED, OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS RUG, BED, ETC., WHILE ON A CHARGER.

# Contents

Limited Warranty, Terms and Conditions.....	p01
In The Box.....	p04
Specifications.....	p05
Charging The AtmosRx®.....	p06
Instructions.....	p07
Cleaning and Maintaining.....	p08
Removing Spring and Filter.....	p09
Replacing the Spring and Filter.....	p10
Warnings.....	p11
Tips.....	p16

# LIMITED WARRANTY, TERMS AND CONDITIONS

## ALL SALES ARE FINAL

For registration, warranty policy and all other information please visit our website at [www.atmosrx.com](http://www.atmosrx.com) or call toll free 1-855-442-8667.

ATMOS NATION, LLC. WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES BY THE USE OR MISUSE OF OUR PRODUCTS (INCLUDING, BUT NOT LIMITED TO, THE REPLACEMENT OF ANY CARPET OR PERSONAL PROPERTY) AND IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY INAPPROPRIATE, INCORRECT, OR IRRESPONSIBLE USE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION, LLC., ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY CAUSED BY MISUSE OF THE PRODUCT.

## Use Only As Directed


Vaporizers are not medical devices and are not intended to cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx<sup>®</sup> products. AtmosRx<sup>®</sup> vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, and those with life threatening illnesses to use our devices.



Thank You for purchasing the AtmosRx®. We hope you enjoy the quality and performance of your new vaporizer.

To ensure peak performance, please read this entire manual for instructions.

## In The Box

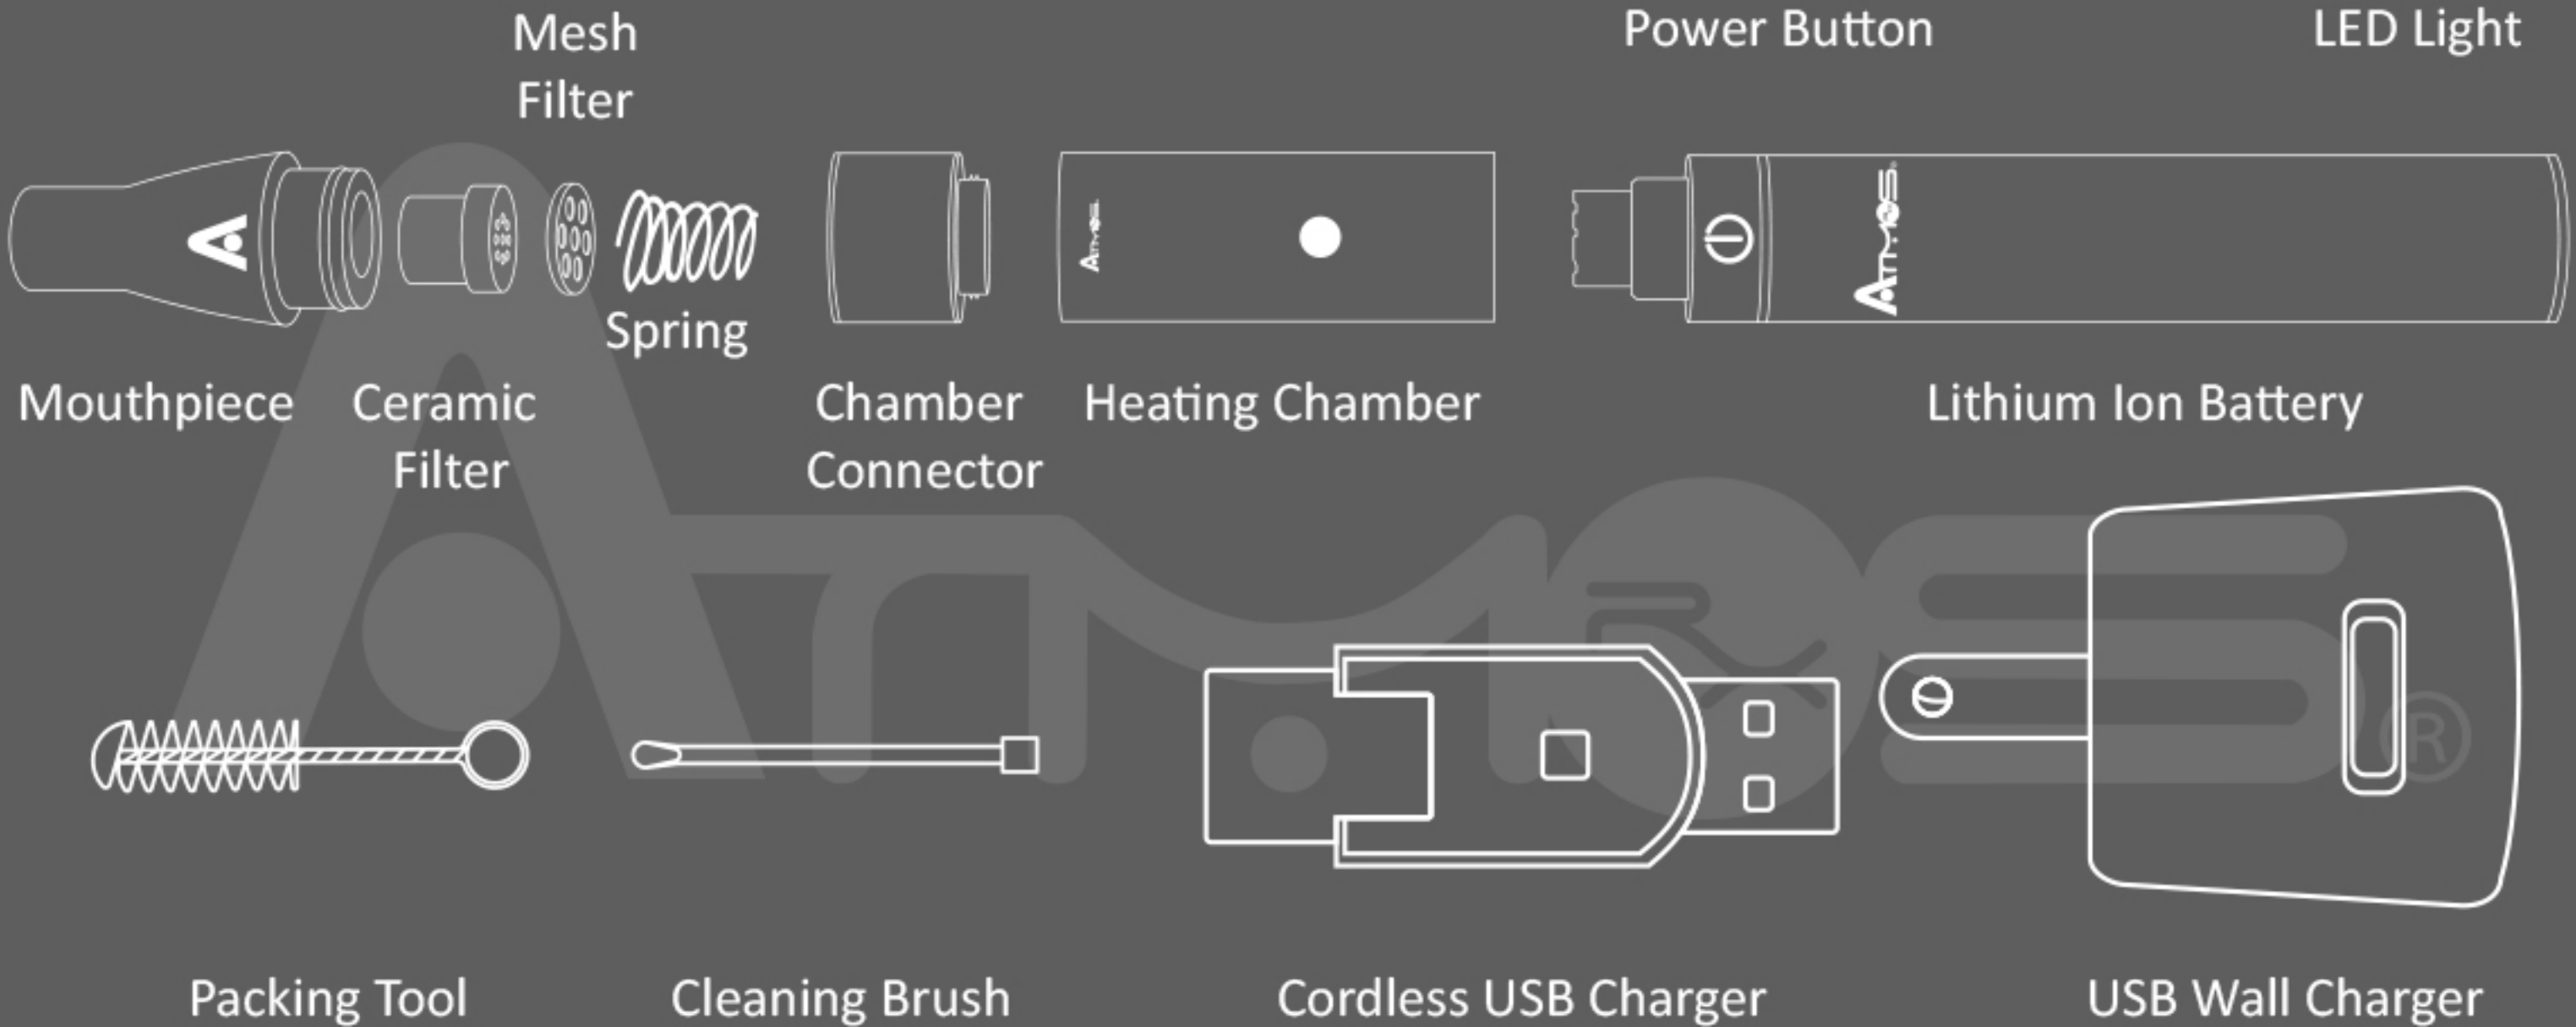

## Specifications

Capacity	650mAh battery
Battery Voltage	3.7V
Charger / Output Voltage	4.2V/3.4V
Lock / Unlock	press (5) times consecutively
Safety Power Duration	(15) seconds
Battery Low	LED Flashes (8) times rapidly



## Charging

- The AtmosRx vaporizer's indicator light will flash rapidly to show that it needs to be charged.
- To charge your vaporizer, remove the battery from the device by turning it counter clock-wise. Once removed, attach the charger to the battery by turning it clockwise.
- Charge your AtmosRx<sup>®</sup> vaporizer for approximately 2 hours. The charger LED light will be red while charging and turn green when the battery is full.

## Instructions

- To Lock/Unlock the AtmosRx<sup>®</sup> vaporizer, press the power button (5) times consecutively.
- Remove the rubber mouthpiece and chamber connector from the heating chamber.
- Apply dry herbs or wax consistency products into the chamber.
- Use the packing tool to gently pack the chamber with your wax consistency products
- Reconnect all the components in the correct order.
- Press the power button to begin vaping.

## Cleaning and Maintaining

To ensure peak performance, clean the mouthpiece, filter, and heating chamber regularly.

- To clean the AtmosRx heating chamber, use a brush tool to gently clean the walls and heating element. A cotton swab and alcohol solution can be used as well.
- To clean the rubber mouthpiece, use a cotton swab and wipe the inner part of the rubber mouthpiece then wipe with a damp paper towel.
- The ceramic filter can be cleaned by soaking the filter in water or an alcohol solution.
- Be sure to let all the components dry completely before using the vaporizer.

## Removing Spring and Filter

- Remove the mouthpiece from the chamber connector.
- Unscrew the chamber connector from the ceramic heating chamber
- Turn the chamber connector upside down and the mesh filter should fall out easily. Use the spoon end of the packing tool if necessary.
- To remove the spring from the chamber connector hold the spring at the highest point possible.
- Twist counterclockwise and quickly pull it through the smaller opening of the chamber connector. The spring is very delicate. If it is stretched from original size, it should be replaced.

## Replacing the Spring and Filter

- Gently pull the spring through the other side till it is secure in its place.
- Place the mesh filter inside the chamber. The packing tool can be used to press the filter in firmly and evenly.
- Screw the chamber connector to the ceramic heating chamber.
- Insert the ceramic filter to the mouthpiece.
- Connect the mouthpiece to the chamber connector.
- Make sure the mouthpiece is pushed all the way into the chamber connector. If the mouthpiece does not go all the way down, then the mesh filter is not lying flat and needs to be readjusted.



## Warning

- **Do Not** leave the AtmosRx unattended while charging.
- **Do Not** immerse the AtmosRx in liquid of any kind.
- **Do Not** put any objects into the opening of your device.
- **Do Not** pierce, modify or damage the AtmosRx's housing in any way.
- **Do Not** use or store the AtmosRx near a heat source.
- **Do Not** clean, fill, disassemble or maintain any portion of the AtmosRx until it has completely cooled.



## International Shipping

All International shipment fees, including but not limited to warranty items are the sole responsibility of the purchaser. All international shipments are subject to duties and fees when crossing borders. Generally, Brokerage fees will be required and Customs may impose duties and taxes based on the value of the goods. The payment of duties and taxes are the responsibility of the purchaser/importer. Please be advised that these fees are normal and are often times applied to shipments that ship internationally. We currently do not offer shipping to APO/FPO/DPO Boxes.

## Battery


Your device is powered by a rechargeable lithium ion battery. Use only Atmos Nation approved batteries and recharge your battery only with Atmos Nation approved chargers designed for this device. Unplug the charger from the electrical outlet and the device when not in use. Do **NOT** leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Atmos Nation takes recycling seriously. Please contact Atmos Nation in order to properly recycle used batteries. Do not dismantle, cut, open, crush, bend, or puncture batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, please send it to Atmos Nation for inspection prior to continuing use. Never use any charger or battery that is damaged.

## Tips

- For best results, do not over pack the ceramic heating chamber with your product. This will ensure easy air flow passage for even heating.
- In the event that vapor is not being released, use the packing tool to gently stir the product within the chamber.

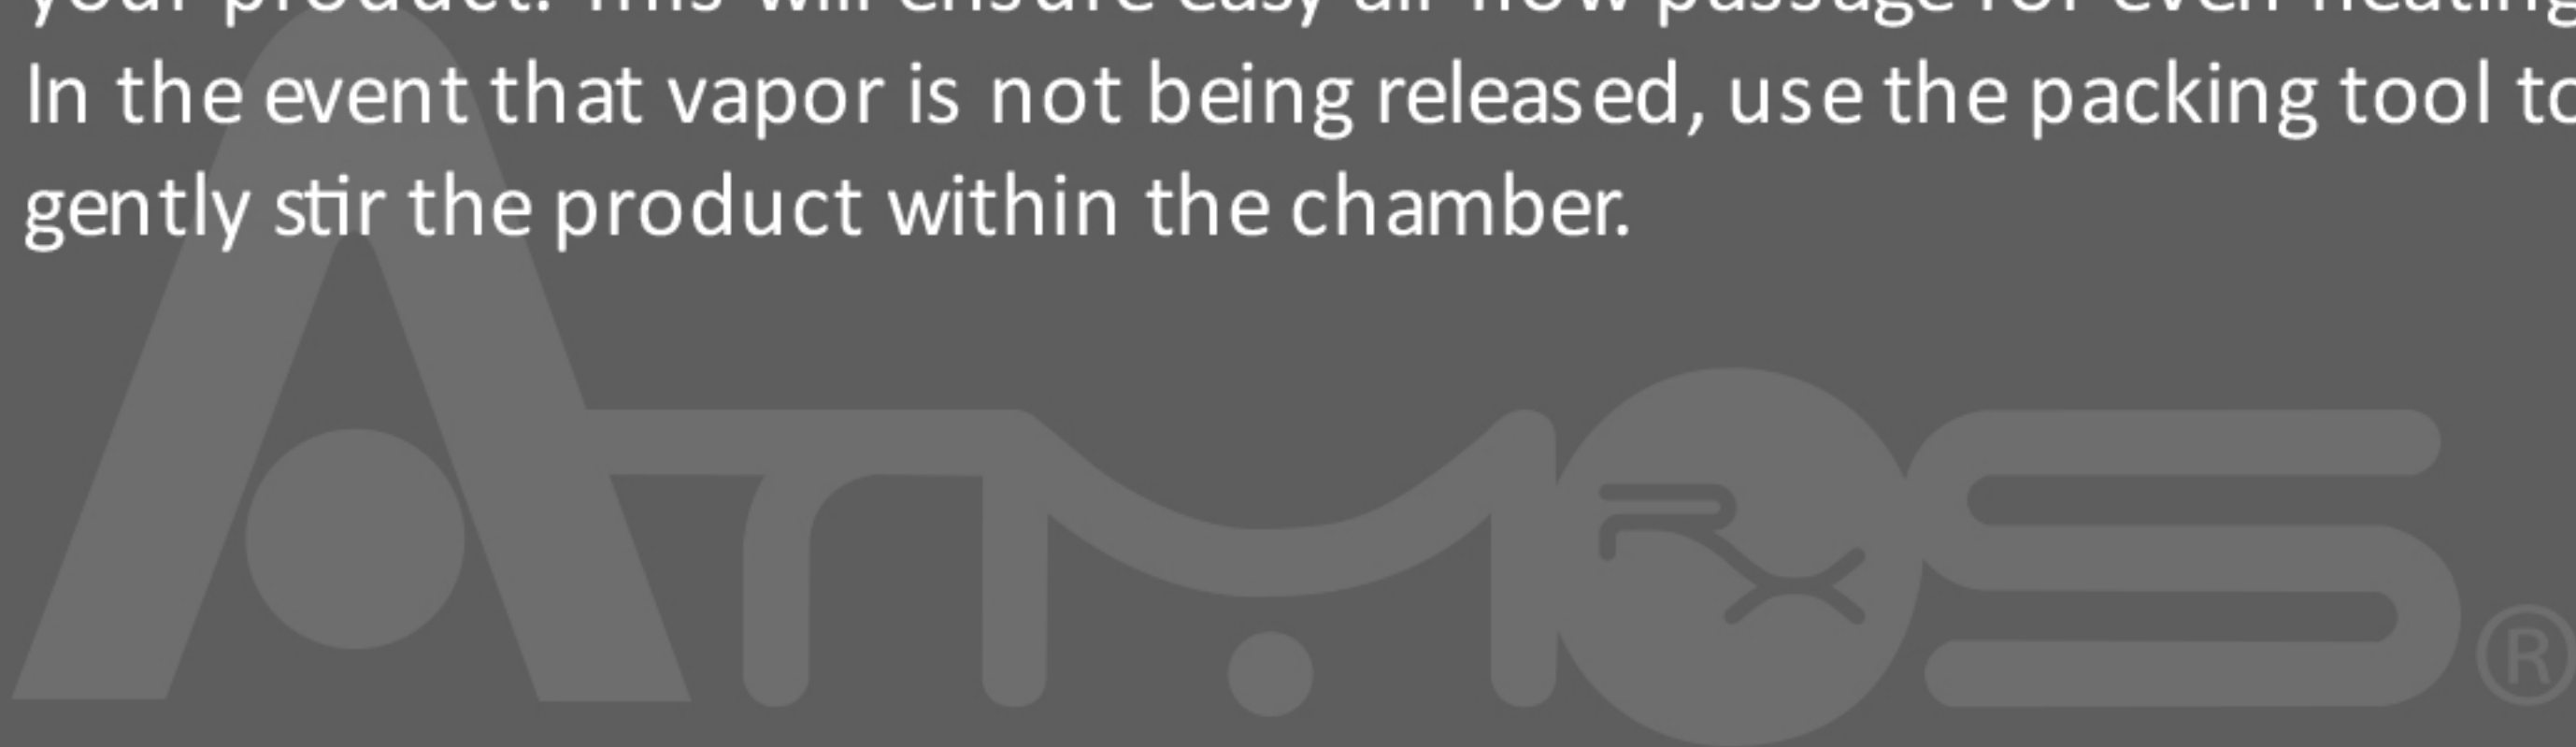

## Notice

The battery included in this kit is equipped with fail-safe short protection. If the battery short-circuits, is damaged by changes in resistance, or comes into contact with liquid during use, it will shut down completely and will remain non-responsive until it is reattached to the battery's charger and cycles through a full charge.

This function helps prevent overheating, as well as permanent damage to the battery.



DEVELOPED & DESIGNED BY ATMOS NATION, LLC.

© COPYRIGHT MMXIV ATMOSRX

PATENT/PENDING: [WWW.ATMOSRX.COM/PATENTS](http://WWW.ATMOSRX.COM/PATENTS)

FORT LAUDERDALE, FL USA 1-855-442-8667

MADE IN CHINA

