

Atmos®

ELECTRO  
DABBER



BEFORE  
USING PRODUCT.




PRODUCT MANUAL

## Contents

Limited Warranty Terms and Conditions.....	p01
In the Box.....	p04
Specifications.....	p05
Charging the Electro Dabber.....	p06
Using the Electro Dabber.....	p07
Cleaning and Maintenance.....	p09
Warnings.....	p10

Dip Your Dabber Directly Into Your Product  
Or Load It Like a Traditional Vaporizer

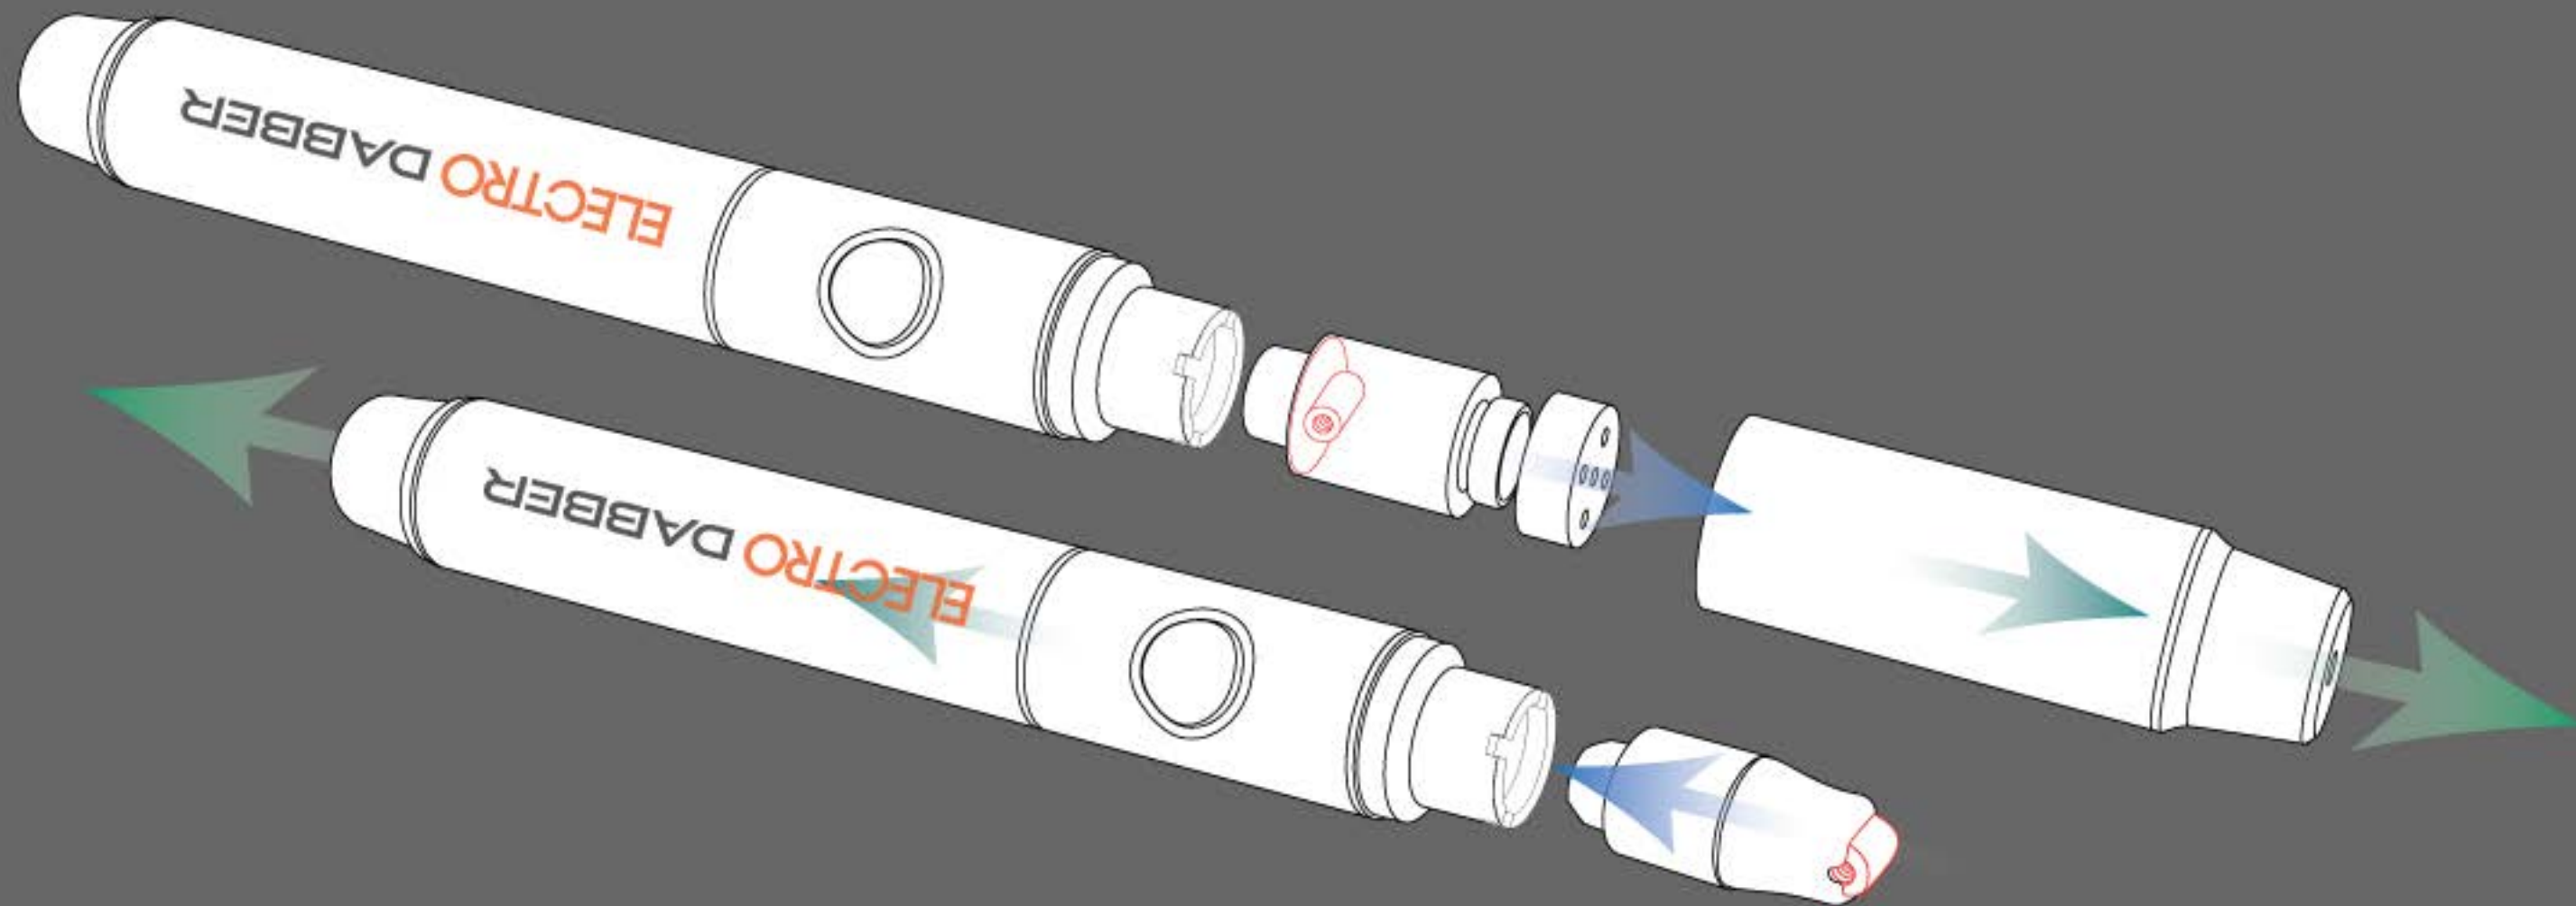

## Caution

ATMOS NATION STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS® CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF SEVEN (7) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED, OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS RUG, BED, ETC., WHILE ON A CHARGER.



## LIMITED WARRANTY, TERMS AND CONDITIONS

ALL SALES ARE FINAL

For registration, warranty policy and all other information please visit our website at [www.atmosrx.com](http://www.atmosrx.com) or call toll free 1-855-442-8667.

ATMOS NATION WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES CAUSED BY THE USE OR MISUSE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY (SUCH AS FIXTURES, FURNITURE, OR CARPET...) CAUSED BY MISUSE OF THE PRODUCT.

## Use Only As Directed

Vaporizers are not medical devices and are not intended to cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx® products. AtmosRx® vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, and those with life threatening illnesses to use our devices.




The Atmos Electro Dabber is a multi-function, wax consistency vaporizer. It uses an advanced, uniquely design atomizer to vaporize wax consistency products without needing to loaded or packed like other portable vaporizers. Just place the heating element into your product and start vaping! Alternatively, if you want to load your Electro Dabber to use it like a traditional vaporizer, you can use the including quartz heating chamber.

To ensure peak performance we recommend that you read this manual in its entirety before using your Atmos Electro Dabber.

## In the Box



Airpath Cleaning Brush

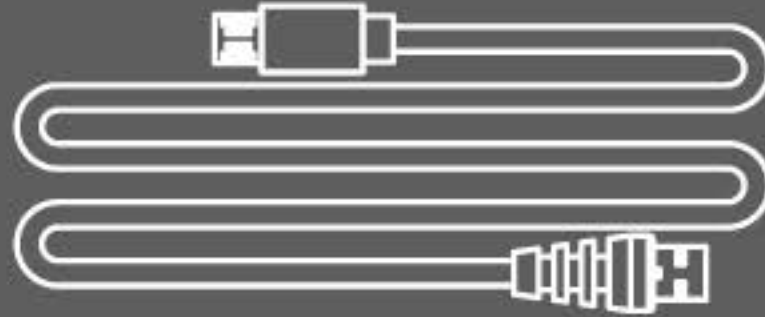

USB Charging Cable



Quartz Heating Chamber



Advanced Heating Tip



Electro Dabber



## Specifications

Size:	118mm*14mm*14mm
Capacity/Voltage	360mAh Li-Ion Battery 3.7V
Lock / Unlock:	press (5) times consecutively
Automatic Mode:	press power button (2) time
Safety Power Duration:	(10) seconds
Safety Power Duration:	light flashes (10) times rapidly

## Charging

- To charge the Atmos Electro Dabber, first remove the heating chamber cover and heating element from the battery.
- Once these pieces are removed, attach the USB charger to the Electro Dabber by screwing the USB charger clockwise onto the battery's connection point.
- You can then plug the USB charger into an Atmos USB Wall Adapter or a computer to begin charging your device.
- When charging, the indicator light will shine blue to show that the Electro Dabber is accepting a charge. Once fully charged the light will shut off.
- We recommend letting the Atmos Electro Dabber charge completely before using the device initially.

## Using the Electro Dabber

- To turn on/off the Electro Dabber press the power button (5) times in rapid succession. Indicator light will flash blue (3) times to show it has turned on/off.
- The Electro Dabber is equipped with both manual and automatic heating modes. To use the Electro Dabber manual, simply press and hold the power button to begin powering the heating element.
- To use the Electro Dabber automatically, press the power button (2) times in rapid succession. The indicator light will shine blue, going from dim to bright, to show it is heating. Automatic heating will stop after (10) seconds. To reactivate the heating element, simply repeat this process.
- The Electro Dabber kit comes complete with (2) different heating elements.



## Using the Electro Dabber

- To use the Electro Dabber without loading your waxy product, attach the Advanced Heating Tip to your device. This will allow you to place your heating element into your waxy product for vaporization, while you inhale through the opposite end of your vaporizer. This is perfect for vaping wax product while it is still in an acrylic container, or when it is sitting on a non-stick pad.
- To use the Electro Dabber as a traditional portable vaporizer, use the quartz heating chamber.
- To load the quartz chamber, first unscrew the cap to reveal the quartz heating element. Once unscrewed, use a packing tool to apply your waxy products to the heating element. Reattached all components, including the chamber cover/mouthpiece, activate your Atmos Electro Dabber, and inhale

## Cleaning and Maintenance

- Ensure that all components of the Electro Dabber are completely cool and that the device has shut down before cleaning.
- The outside of the device and the mouthpiece can be cleaned with a cloth and alcohol. Alternatively, you can soak the mouthpiece in an alcohol and water mix overnight for a deep clean.
- The heating chambers can be cleaned with a cotton swab and alcohol. However, replacement chambers will be needed once the heating element burns out in the future.
- It is very important that the airflow path of the Electro Dabber is cleaned regularly, otherwise device performance will suffer. To clean the airflow path, remove both the mouthpiece, chamber cover, and heating element to reveal both sides of the airflow path. Then insert a pipe cleaner, or cotton swab, into the airflow path to unclog the airway.



## Warning

- **Do Not** charge the device over a fire source or extremely hot environment.
- **Do Not** immerse the Electro Dabber in liquid of any kind. This can damage the heating element, and potentially harm the device.
- **Do Not** transport or store the device with any metal items.
- **Do Not** use or store the device near a heat source.
- **Do Not** pierce the housing with any sharp object.
- **Do Not** take the device apart or modify it in any way.

**Notice:** After using the device's advanced heating tip, we highly recommend that you keep the Electro Dabber's heating element facing down while the device is cooling. This will prevent wax consistency product from entering the airflow tube and clogging the device. After using the device's Quartz Chamber, we highly recommend that the device lay on its side during cooling.



## International Shipping

All International shipment fees, including but not limited to warranty items are the sole responsibility of the purchaser. All international shipments are subject to customs fees when crossing borders. The payment of duties and taxes are the responsibility of the purchaser/importer.



## Battery

Your device is powered by a rechargeable lithium ion battery. Use only Atmos Nation approved batteries and recharge your battery only with Atmos Nation approved chargers designed for this device. Unplug the charger from the electrical outlet and the device when not in use. Do **NOT** leave a fully charged battery connected to a charger, as it may shorten the battery life over time. Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing. ®

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Do not dismantle, cut, open, crush, bend, or puncture batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, and seek medical help.

Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, please contact Atmos for instructions on how to send the device back for inspection before use. Never use any charger or battery that is damaged.





© COPYRIGHT 2018 ATMOSRX  
[WWW.ATMOSRX.COM/PATENTS](http://WWW.ATMOSRX.COM/PATENTS)

FORT LAUDERDALE, FL USA 1-855-442-8667

MADE IN CHINA

