

Atmos[®] GREEDY M²



BEFORE
USING PRODUCT.



PRODUCT MANUAL

Caution

ATMOS NATION STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS® CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF SEVEN (7) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED, OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS RUG, BED, ETC., WHILE ON A CHARGER.

Contents

Limited Warranty, Terms and Conditions.....	p01
In the Box.....	p04
Preparing the Greedy M2.....	p05
Getting to Know the Chambers.....	p06
Changing Your Heating Chambers.....	p07
Using the Greedy M2.....	p08
Cleaning the Greedy M2.....	p10
Warnings.....	p11

LIMITED WARRANTY, TERMS AND CONDITIONS

ALL SALES ARE FINAL

For registration, warranty policy and all other information please visit our website at www.atmosrx.com or call toll free 1-855-442-8667.

ATMOS NATION WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES CAUSED BY THE USE OR MISUSE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY (SUCH AS FIXTURES, FURNITURE, OR CARPET) CAUSED BY MISUSE OF THE PRODUCT.

Use Only As Directed

Vaporizers are not medical devices and are not intended to cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx® products. AtmosRx® vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, and those with life threatening illnesses to use our devices.


The Greedy M2 is a unique heating attachment made of pure and durable stainless steel. The Greedy M2 is versatile, in that it is compatible with a wide variety of the different Atmos heating chambers, from the relatively new Studio Rig chambers, to the classic coiled chambers and Atmos Female to 510 Adapter. We hope you enjoy this device, as much as we enjoy making it for you.

To ensure peak performance we recommend that you read this manual in its entirety before using your Greedy M2.

In the Box




Dry Herb Filter

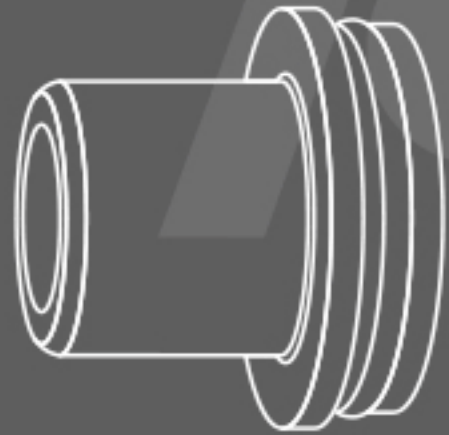

Mouthpiece



Splash
Resistant
Filter

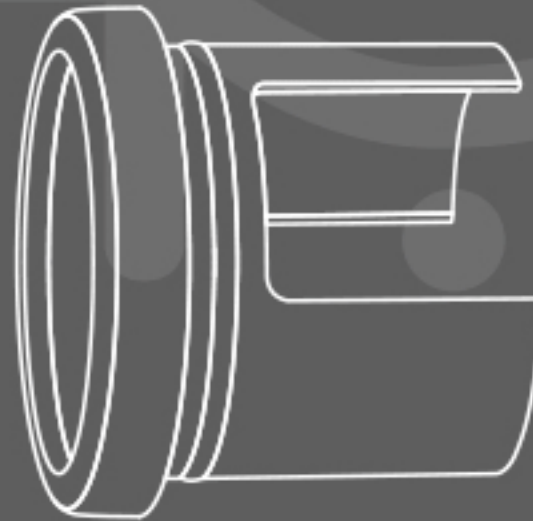

Airflow Seal



Attachment Housing



Adjustable Airflow Base

Preparing the Greedy M2

Depending on the chamber you're using, you may need to change the filter for the Greedy M2. To do so, follow the instructions below:

- Remove the mouthpiece from the Greedy M2's housing
- To remove the splash prevention mouthpiece, simply pull on the waxy filter to remove it from the mouthpiece.
- The dry herb filter can be placed below the mouthpiece, on top of the attachment housing.
- The splash prevention mouthpiece should always be used when vaping wax consistency products. Likewise, the dry herb filter should always be used when vaping dry herb products.
- Make sure all components have cooled before attempting to remove or replace either of the Greedy M2 filters.

Getting to Know the Heating Chambers

The Greedy M2 can be used with a variety of different Atmos heating chambers. Below are just a few of the chambers compatible with the Greedy M2:

- Titanium Nail, Ceramic Chamber, and Ceramic Nail Studio Rig Chambers.
- All Original Greedy Atomizers.
- Forge Atomizers.
- The Junior Heating Chamber, as well as other classic chambers compatible with the Atmos Female to 510 Male Adapter.

Changing Your Heating Chambers

Please disconnect the Greedy M2 from your battery and allow all components to cool before handling.

To change the chamber in your Greedy M2, follow these simple steps:

- Remove the mouthpiece and housing from the adjustable airflow base.
- Unscrew the heating chamber that is currently attached to the Greedy's base.
- Insert the desired heating chamber, screwing it clockwise into the base until it is completely secured.
- Reattach the Greedy M2 mouthpiece and housing, along with the appropriate filter before attaching the Greedy M2 to your box mod or 510 battery.

Using the Greedy M2

To Use the Greedy M2 with waxy chambers, follow these simple steps:

- Remove the Greedy's housing and mouthpiece to reveal the heating chamber.
- Using a packing tool, apply your waxy product directly onto the heating element of the chamber inserted into the Greedy, and reattach the housing and mouthpiece.
- With all components attached, begin heating the Greedy M2 by firing the attached box mod or mod battery.
- Once the desired temperature is reached, inhale slowly.

Using the Greedy M2

To Use the Greedy M2 with dry herb chambers, follow these simple steps:

- Remove the Greedy's housing and mouthpiece to reveal the heating chamber.
- Using a packing tool, apply your dry herbs into the heating chamber inserted into the Greedy, and reattach the housing and mouthpiece.
- Begin firing your box mod or mod battery until a desired temperature is reached. Depending on the battery you are using you will need to experiment with different wattages and intervals to find the perfect point of vaporization.
- Once the desired temperature is reached, inhale slowly.

Cleaning and Maintenance

Please disconnect the Greedy M2 from your battery and allow all components to cool before handling or cleaning the Greedy M2

- The Greedy M2 mouthpiece, base, and housing can be cleaned by soaking them in a mixture of soap and water overnight. Let all components dry completely before reattaching it to your battery.
- The waxy chambers can be cleaned using a 90% alcohol solution and a cotton swab, or by soaking in soap in water. Dry herb chambers should be cleaned by gently rubbing the chamber with a cleaning brush. This process may vary depending on the specific chamber, if possible, always refer to the chambers manual or instructions for specific cleaning processes.
- Be sure to regularly clean the connections on both the Greedy and your battery to ensure secure connections.

Warning

- **Do Not** pack any of the Greedy M2's chambers too tightly with any product. This can inhibit airflow.
- **Do Not** clean, fill, disassemble or maintain any portion of the Greedy M2 until it has completely cooled.
- **Do Not** attach the Greedy M2's base to your battery without the heating chamber connected. This may cause issues with the Greedy M2's pin-connector.

Notice: To ensure peak performance, when using the Greedy M2 with compatible heating chambers and a variable wattage battery, we recommend using a range of 5-15 Watts, unless otherwise specified in the heating chambers manual. If you are using a temperature control battery with any of the compatible Greedy M2 heating chambers, we recommend a temperature between 300 and 400 degrees. We also recommend that users power their device in intervals of about 3-4 seconds to avoid over working any of the compatible heating chambers. Using settings higher than those outlined here may cause damage to the heating element. Pulsing rates and discharging rates vary with different brands of batteries, so these settings will not be true for all brands of batteries. We highly recommend starting at 5 Watts and moving up slowly if needed.

Caution: There is no form of temperature control built into the Greedy M2 or heating chambers compatible with the Greedy M2. Therefore, the temperature of the heating element and of the stainless steel housing is entirely dependent on user operation. Heating chambers compatible with the Greedy M2 can reach extremely high temperatures if used improperly, putting both the user and the device at risk of harm. Atmos does not take any responsibility for personal injury, or any form of damage caused by misuse of the Greedy or Greedy M2 devices. Let the heating element and all portions of the device in contact with the heating element cool before handling.

Atmos highly recommends using the Greedy M2 with exclusively Atmos brand batteries. Atmos batteries are equipped with a number of protections that other brands do not have. If you do not have an Atmos brand battery, or if you decide to use the Greedy M2 with non-Atmos brand batteries, you are using the Greedy M2 at your own risk.

International Shipping

All International shipment fees, including but not limited to warranty items are the sole responsibility of the purchaser. All international shipments are subject to duties and fees when crossing borders. Generally, Brokerage fees will be required and Customs may impose duties and taxes based on the value of the goods. The payment of duties and taxes are the responsibility of the purchaser/importer. Please be advised that these fees are normal and are often times applied to shipments that ship internationally. We currently do not offer shipping to APO/FPO/DPO Boxes.

Battery

Your device is powered by a rechargeable lithium ion battery. Use only Atmos Nation approved batteries and recharge your battery only with Atmos Nation approved chargers designed for this device. Unplug the charger from the electrical outlet and the device when not in use. Do **NOT** leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Atmos Nation takes recycling seriously. Please contact Atmos Nation in order to properly recycle used batteries. Do not dismantle, cut, open, crush, bend, or puncture batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, please send it to Atmos Nation for inspection prior to continuing use. Never use any charger or battery that is damaged.



© COPYRIGHT MMXVI ATMOSRX

WWW.ATMOSRX.COM/PATENTS

FORT LAUDERDALE, FL USA 1-855-442-8667

MADE IN CHINA

