

# Amos<sup>®</sup> Jump



BEFORE  
USING PRODUCT.



PRODUCT MANUAL

## Caution

ATMOS NATION, LLC., STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS® CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF FOUR (4) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED, OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS RUG, BED, ETC., WHILE ON A CHARGER.

# Contents

Limited Warranty, Terms and Conditions.....	p01
In The Box.....	p04
Specifications.....	p05
Charging The AtmosRx® Jump.....	p06
Instructions.....	p07
Cleaning and Maintaining.....	p09
Warnings.....	p10
Tips.....	p11

# **LIMITED WARRANTY, TERMS AND CONDITIONS**

## **ALL SALES ARE FINAL**

For registration, warranty policy and all other information please visit our website at [www.atmosrx.com](http://www.atmosrx.com) or call toll free 1-855-442-8667.

ATMOS NATION, LLC. WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES BY THE USE OR MISUSE OF OUR PRODUCTS (INCLUDING, BUT NOT LIMITED TO, THE REPLACEMENT OF ANY CARPET OR PERSONAL PROPERTY) AND IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY INAPPROPRIATE, INCORRECT, OR IRRESPONSIBLE USE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION, LLC., ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY CAUSED BY MISUSE OF THE PRODUCT.

**1.**



## Use Only As Directed

Vaporizers are not medical devices and are not intended to cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx® products. AtmosRx® vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, and those with life threatening illnesses to use our devices.

The Jump is one of the most compact and durable dry herb vaporizers available. Equipped with an easy-access mouthpiece, a hard anodized heating chamber, and a high-grade carbon fiber housing, the Jump provides an unrivaled level of performance.

To ensure peak performance and the safety of your Jump vaporizer, please read this entire manual before using your device.

## In The Box



PRODUCT MANUAL

Manual



Mouthpiece


Heating Chamber/Lithium Ion Battery



Cleaning Brush Tool



Packing Tool

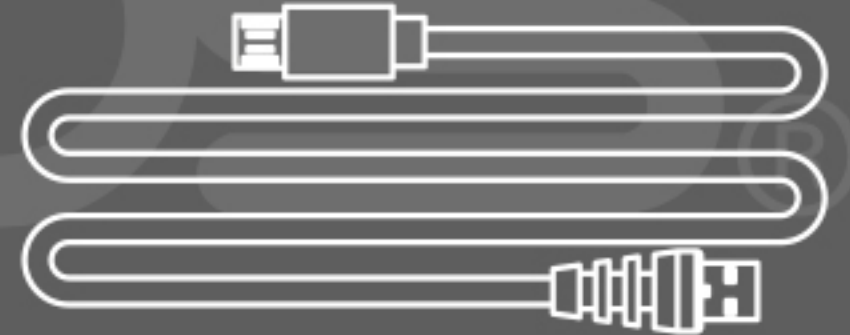

USB Charging Cable

## Specifications

Capacity	1300mAh battery
Battery Voltage	3.4V
Charger / Output Voltage	4.2V/3.3V
Lock / Unlock	press (3) times consecutively
Safety Power Duration	(4) minutes
Battery Low	LED Flashes (8) times rapidly



## Charging the jump

- When the Jump's battery is running low, the indicator light will flash (8) times. After (3) low battery notifications the Jump will shut off until recharged.
- The Jump can be charged through the micro-USB connection located at the bottom of the device.
- While charging, the indicator light located at the bottom of the device will shine red to indicate the device is accepting a charge. This light will stop shining when the device is fully charged.
- For its initial charge, charge the Jump for (6) hours. This conditions the battery for future life-span. Regularly, the Jump will take approximately (4) hours to fully charge.

## Preparing the Jump

- Turn the mouthpiece counter clockwise to remove it from the Jump.
- Apply your dry herbs into the Jump's heating chamber.
- Using the packing tool gently pack the heating chamber.  
**Do not** over pack the heating chamber as this can block the airflow of the device and cause a decrease in performance.
- Turn the mouthpiece clockwise to reattach the mouthpiece to the heating chamber.

## Instructions

- Once your dry herbs are packed into the heating chamber, press the power button (3) times in rapid succession. The indicator light will shine yellow to show that the unit is heating. Once the temperature reaches 392°F, the indicator light will shine green.
- Inhale slowly. The Jump will automatically shut off after (4) minutes, this is the device's safety duration. To reactive the heating element, simply click the power button (3) times in rapid succession.

## Cleaning and Maintaining

Regular cleaning of the Jump's heating chamber and mouthpiece is crucial to maintaining peak performance and airflow.

- Ensure that the Jump is off and that the device has completely cooled before cleaning.
- The brush tool, included in the box, can be used to clean the walls of the heating chamber and to gently clean the Jump's filter.
- To clean the Jump's mouthpiece first unscrew the filter from the bottom of the mouthpiece and remove the additional ceramic filter. The mouthpiece and filters can all be cleaned using a cotton swab and alcohol.
- Be sure to let all components cleaned with alcohol dry before resuming use.

## Warnings

**Do not** handle the Jump's heating chamber or mouthpiece until the device has cooled completely.

**Do not** fill the Jump or allow the Jump to come in contact with liquid of any kind.

**Do not** modify the Jump in any way. Doing so will void the warranty.

**Do not** leave the Jump unattended while charging.

**Do not** pierce or damage the Jump's housing in any way.

**Do not** use or store the Jump near a heat source.



## Tips and Trouble Shooting

- Make sure you are using a compatible charger with the Jump vaporizer. Slow charging is much healthier for the battery. This means you should plug your device into a laptop, computer, or low output voltage wall adapter. High voltage output adapters, like phone adapters, can damage the battery over time.
- If you are experiencing issues with airflow or drawing please try the follow: pre-heat the Jump on an empty cycle before using/ packing the device. After the empty cycle, once the device cools completely, then you can begin packing the chamber. **Do Not** overfill the chamber or pack it too tightly. Instead, break your dry herb by hand and loosely pack the chamber with smaller pieces.

## International Shipping

All International shipment fees, including but not limited to warranty items are the sole responsibility of the purchaser. All international shipments are subject to duties and fees when crossing borders. Generally, Brokerage fees will be required and Customs may impose duties and taxes based on the value of the goods. The payment of duties and taxes are the responsibility of the purchaser/importer. Please be advised that these fees are normal and are often times applied to shipments that ship internationally. We currently do not offer shipping to APO/FPO/DPO Boxes.



## Battery

Your device is powered by a rechargeable lithium ion battery. Use only Atmos Nation approved batteries and recharge your battery only with Atmos Nation approved chargers designed for this device. Unplug the charger from the electrical outlet and the device when not in use. Do **NOT** leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Atmos Nation takes recycling seriously. Please contact Atmos Nation in order to properly recycle used batteries. Do not dismantle, cut, open, crush, bend, or puncture batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, please send it to Atmos Nation for inspection prior to continuing use. Never use any charger or battery that is damaged.



© COPYRIGHT MMXIV ATMOSRX

[WWW.ATMOSRX.COM/PATENTS](http://WWW.ATMOSRX.COM/PATENTS)

FORT LAUDERDALE, FL USA 1-855-442-8667

MADE IN CHINA

