


Atmos®
VICOD 5G
2ND GENERATION

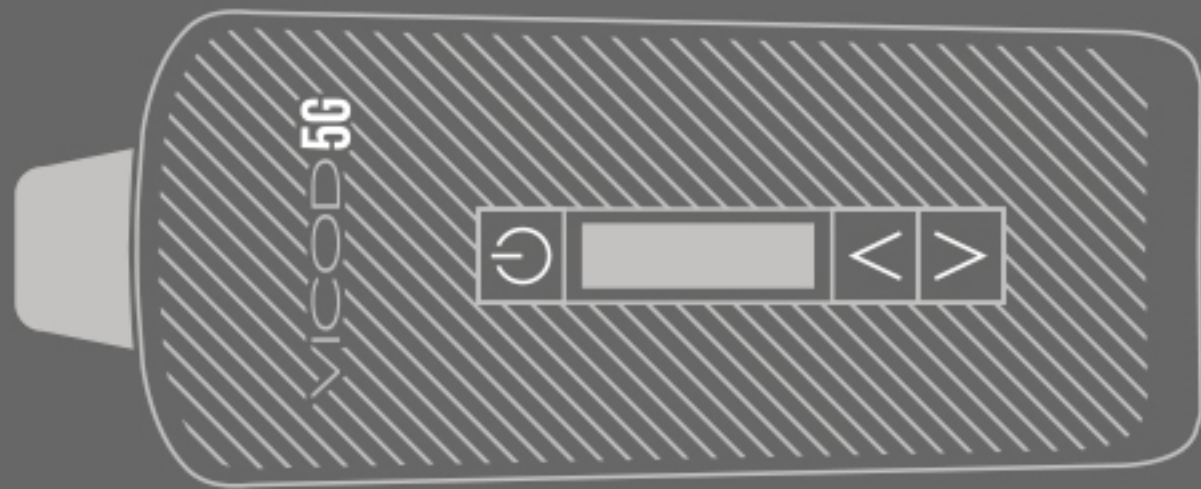

PRODUCT MANUAL

Caution

ATMOS NATION, LLC., STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS® CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF FOUR (4) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED, OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS RUG, BED, ETC., WHILE ON A CHARGER.

Contents

Limited Warranty, Terms and Conditions.....	p01
In The Box.....	p04
Specifications.....	p05
Charging The Vicod 5G.....	p06
Preparing the Vicod 5G.....	p07
Using the Vicod 5G.....	p08
Temperature Control Settings.....	p09
Cleaning and Maintenance.....	p10
Warnings.....	p11

LIMITED WARRANTY, TERMS AND CONDITIONS

ALL SALES ARE FINAL

For registration, warranty policy and all other information please visit our website at www.atmosrx.com or call toll free 1-855-442-8667.

ATMOS NATION, LLC. WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES BY THE USE OR MISUSE OF OUR PRODUCTS (INCLUDING, BUT NOT LIMITED TO, THE REPLACEMENT OF ANY CARPET OR PERSONAL PROPERTY) AND IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY INAPPROPRIATE, INCORRECT, OR IRRESPONSIBLE USE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION, LLC., ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY CAUSED BY MISUSE OF THE PRODUCT.

1.

Use Only As Directed

Vaporizers are not medical devices and are not intended to cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx[®] products. AtmosRx[®] vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, and those with life threatening illnesses to use our devices.


The Vicod 5G is a compact and durable dry herb and wax consistency vaporizer that fits discreetly into the palm of your hand. It uses a high-grade embedded ceramic heating chamber alongside advanced temperature controls, which can be adjusted from 300° to 435°, to produce pure and flavorful vapor.

To ensure peak performance we recommend that you read this manual in its entirety before using your Vicod 5G device. [®]

In The Box




Manual

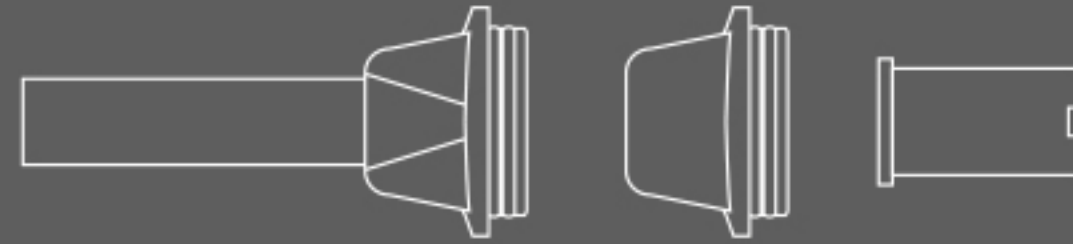

Glass / Mouthpiece

Waxy Cup

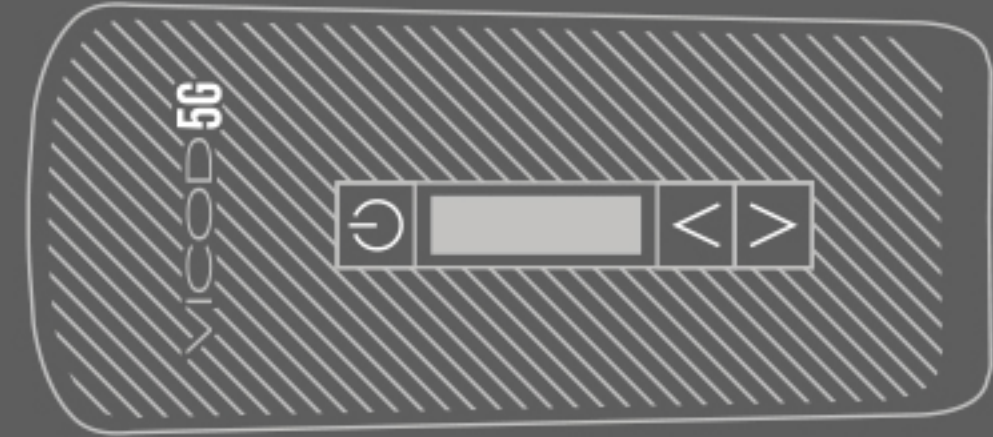


Vicod 5G



Cleaning Brush Tool



Packing Tool

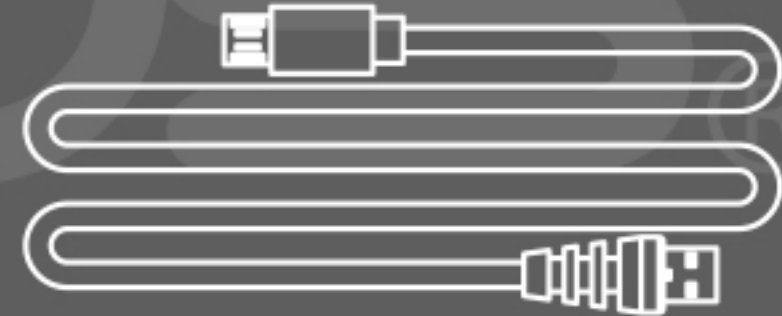

USB Charging Cable

Specifications

Size	90mm*40mm*20mm
Capacity/Voltage	2200mAh Li-Poly Battery 3.7V
Temperature Range	300°F – 435°F / 149°C-224°C
Lock / Unlock	press (5) times consecutively
Safety Power Duration	(5) Minutes
Battery Low	Red light flashes (10) times rapidly

Charging

- The Vicod 5G's red light will blink (10) times rapidly before shutting down when the battery is depleted. The Vicod 5G's remaining battery life can be found at any time on the Vicod 5G's OLED screen.
- The Vicod 5G can be charged through the micro USB port located on the side of the device.
- While charging, the Vicod 5G's light will flash blue to show that it is accepting a charge. When fully charged, the light will shine a consistent blue without flashing.
- The Vicod 5G will take approximately (3) hours to charge. A full charge is recommended before first use.

Preparing the Vicod 5G

Caution: While using the Vicod 5G, portions of the device may reach high temperatures. Wait until the device has completely COOLED before handling.

- When loading the Vicod 5G, remove the mouthpiece from the heating chamber by lightly pushing the tip of the mouthpiece forward.
- If you are using the Vicod 5G with dry herbs, apply your dry herbs into the heating chamber. Be sure not to over-pack the chamber as this can reduce airflow.
- If you are using the Vicod 5G with wax consistency products, insert the waxy titanium cup into the heating chamber. Then apply your wax consistency product into the waxy titanium cup.
- Once your product has been applied, re-attach the mouthpiece.

Using the Vicod 5G

- To turn on/off the Vicod 5G press the power button (5) times in rapid succession.
- When turned on, the Vicod 5G will begin heating to your selected temperature. Be sure to load your device before turning it on.
- While heating, the Vicod 5G's OLED display will show the word "Heat", and the interface will flash blue lights to indicate the device is heating up.
- Once the desired temperature is reached, the Vicod 5G's OLED display will show the word "Warm" and the interface will display a solid non-blinking blue light to indicate the device is ready to be used.
- After (5) minutes, the Vicod 5G will automatically shut down. This is the device's safety power duration. To start your next session, simply repeat the process outlined on this page.

Temperature Control Settings

- The Vicod 5G is capable of reaching any temperature within the range of 300°F to 435°F
- Using the +/- buttons on the Vicod 5G, you can increase or decrease the desired temperature.
- By holding the power button and the “+” button for (3) seconds, you can change from Celsius to Fahrenheit. By holding the power button and the “-” button for (3) seconds, you can change from Fahrenheit to Celsius.
- The Vicod 5G comes equipped with a built in memory function, and will automatically heat to the most recent temperature selected when turned on.

Cleaning and Maintenance

Do Not disassemble or clean your device until it has completely cooled.

- The outer housing of your device can be cleaned using a cleaning rag or a cotton swab with water. Do not use alcohol to clean the outside of your device as this can damage to outer shell.
- The inside of your vaporizers heating chamber can be cleaned using either a cleaning brush or a cotton swab and rubbing alcohol. When using alcohol for cleaning, ensure that the chamber has completely cooled before applying the cotton swab to the chamber.

Never dip, submerge, or fill your vaporizer with liquid of any kind. This can damage the heating element and battery. After cleaning, allow your device to dry completely before using your vaporizer again.

Warning

- **Do Not** charge the device over a fire source or extremely hot environment.
- **Do Not** transport or store the device with any metal items.
- **Do Not** let the device come into contact with moisture.
- **Do Not** use or store the device near a heat source.
- **Do Not** pierce the housing with any sharp object.
- **Do Not** hit or step on the device
- **Do Not** take the device apart or modify it in any way.
- **Do Not** fill the heating chamber with any stems, or seeds.



© COPYRIGHT MMXIV ATMOSRX

WWW.ATMOSRX.COM/PATENTS

FORT LAUDERDALE, FL USA 1-855-442-8667

MADE IN CHINA

